

Turning an Americana Classic Pen

Supplies Needed

- “S” Size Drill Bit
- 3/4" x 3/4" x 5" Pen Blank
- Pen Mandrel
- Americana Classic Bushings
- Glue (Thick CA or Epoxy)
- Sandpaper/Finish
- Drill or Drill Press
- Barrel Trimmer/
- Pen Press or Clamp
- Eye and Ear Protection

Cutting and Drilling the Pen Blank

1. Cut the blank 1/4" longer than the brass tube.
2. Using a drill press with the blank secured in a vise or clamp, drill a hole through the center of the blank stopping an 1/8" short of the bit exiting the blank. Drill at 2,000–3,000 rpm backing the drill bit partially out of the hole every 1/2" to clear chips. When using larger bits or drilling plastics drill at 250–500 rpm.
3. Trim away the small amount of wood from the end of the blank to expose the hole. The blank should remain slightly longer than the brass tube. This technique prevents cracking caused when the bit exits the blank.

Gluing the Brass Tube Into the Blank


1. Lightly scuff the exterior of the brass tube with 220 grit sand paper to prepare it for gluing.
2. For a fast bond, use thick cyanoacrylate adhesive (super glue) or 5 minute epoxy. For additional working time and more thorough bond, use expanding polyurethane (Gorilla or Sumo Glue). Apply a thin layer of glue to the tube and inside the wood blank. Insert the tube into the blank rotating it as you go to spread the glue evenly. Position the brass tube in the blank so that the wood extends beyond the tube on both ends to allow for trimming.

Trimming/Truing the Blank

1. Square the ends of the wood blank with the tube using either a barrel trimmer or disc sander. This step is critical for the pen components to fit together properly. **Do Not** trim the brass tube as this may result in an improper fit when the pen is assembled.

Mandrel Setup and Turning

1. Place the bushings and blank (not shown) on the pen mandrel, using a wooden spacer for proper fit.

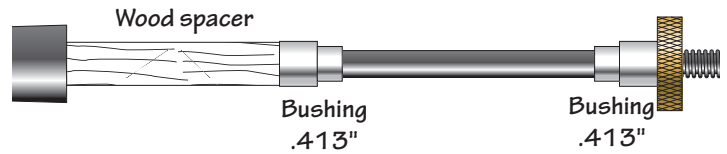

2. Advance a 60° revolving cone center into the dimpled end of the mandrel and tighten using light pressure. **Do Not** over tighten the tailstock or mandrel nut as this may cause the mandrel to flex resulting in an off-center barrel.
3. Turn the blank to the desired shape leaving the blank slightly larger than the bushings.
4. Sand the blanks using progressively finer grits of sand paper, then apply the finish.

Assemble the Parts

Layout the parts as shown. Use a vise or clamp with wood or plastic jaws to prevent damaging parts during assembly.

1. Press the tip into the end of the black tip and lay it aside.
2. Press the gold tip into the end of the brass tube.
3. Slide the clip onto the twist mechanism coupler then press them into the other end of the brass tube.
4. Press the brass end of the twist mechanism into the twist mechanism coupler. STOP pressing when the overall assembly length is FOUR INCHES long (excluding the assembled black tip).
5. Slide the spring onto the refill point.
6. Slide the refill and spring into the assembled pen body.
7. Screw the assembled black tip into the gold tip and test the pen. If the pen refill does not extend through the point, remove the refill and press the twist mechanism in a little deeper. Be Careful not to press it in too far.
8. Slide the cap over the twist mechanism to complete the pen.

