

Turning a Clicker Pen

Supplies Needed

- 3/8" Drill Bit
- 3/4" x 4 1/2" Pen Blank
- Pen Mandrel
- Clicker Bushings
- Glue (Thick CA or Epoxy)
- Sandpaper/Finish
- Drill or Drill Press
- Barrel Trimmer/Disc Sander
- Pen Press or Clamp
- Eye and Ear Protection

Cutting and Drilling the Pen Blank

1. Cut the blank 1/4" longer than the brass tube.
2. Using a drill press with the blank secured in a vise or clamp, drill a hole through the center of the blank stopping an 1/8" short of the bit exiting the blank. Drill at 2,000–3,000 rpm backing the drill bit partially out of the hole every 1/2" to clear chips. When using larger bits or drilling plastics drill at 250–500 rpm.
3. Trim away the small amount of wood from the end of the blank to expose the hole. The blank should remain slightly longer than the brass tube. This technique prevents cracking caused when the bit exits the blank.

Gluing the Brass Tube Into the Blank

1. Lightly scuff the exterior of the brass tube with 220 grit sand paper to prepare it for gluing.
2. For a fast bond, use thick cyanoacrylate adhesive (super glue) or 5 minute epoxy. For additional working time and more thorough bond, use expanding polyurethane (Gorilla or Sumo Glue). Apply a thin layer of glue to the tube and inside the wood blank. Insert the tube into the blank rotating it as you go to spread the glue evenly. Position the brass tube in the blank so that the wood extends beyond the tube on both ends to allow for trimming.

Trimming/Truing the Blank

1. Square the ends of the wood blank with the tube using either a barrel trimmer or disc sander. This step is critical for the pen components to fit together properly. **Do Not** trim the brass tube as this may result in an improper fit when the pen is assembled.

Mandrel Setup and Turning

1. Place the bushings and blank (not shown) on the pen mandrel, using a wooden spacer for proper fit.




2. Advance a 60° revolving cone center into the dimpled end of the mandrel and tighten using light pressure. **Do Not** over tighten the tailstock or mandrel nut as this may cause the mandrel to flex resulting in an off-center barrel.
3. Turn the blank to the desired shape leaving the blank slightly larger than the bushings.
4. Sand the blank using progressively finer grits of sand paper, then apply your favorite finish.

Assemble the Parts

Layout the parts as shown. Use a vise or clamp with wood or plastic jaws to prevent damaging parts during assembly.

1. Thread the bushing into the writing tip.
2. Press the bushing, stepped end first into the lower end of the brass tube.
3. Slide the clip onto the click transmission.
4. Slide the press tool over the click plunger of the transmission. The press tool will protect the plunger while the parts are pressed together.
5. With the press tool in place press the click transmission and clip into the tube.
6. Remove the writing tip and slide the ink refill into the tip end of the barrel and replace the writing tip to complete the pen.

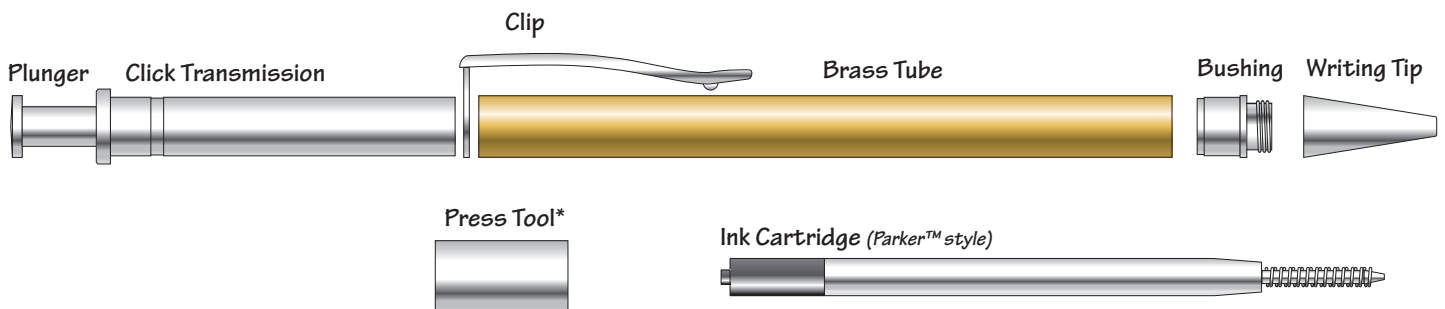

*Press Tool for assembly only. Not a part of completed pen.