


LIBERTY PEN KIT - ASSEMBLY INSTRUCTIONS

 Cut the blank to proper length before gluing in brass tube. We recommend epoxy for best results. Carefully sand or trim blank flush with brass tube. Excessive trimming could result in the refill sticking out too far.

- Using a mandrel or centers, turn the blank on your lathe to the diameter of the bushings.
- 4: After finishing the turned blank, carefully press the front section into the smaller diameter (.498") end of the blank.

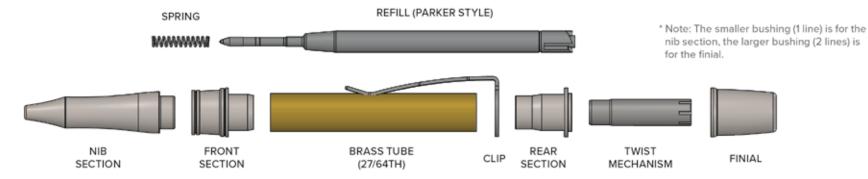

- Place the rear section piece through the hole in the clip and press into the larger diameter side of the blank (.533") Then screw the mechanism into the rear section.
- Push the rear finial onto the exposed end of the twist mechanism.
- Put the refill into the pen from the front section, place the spring on the end of the refill, and screw the nib section onto the pen.

